

Leggere sempre le istruzioni prima dell'uso
Always read the instructions before the installation

AISIN GHP *Accessories Remote summer-winter kit*
MANUALE DI INSTALLAZIONE – INSTALLATION MANUAL
8-10-13-16-20-25 HP A-SERIES


Parti consegnate – Parts delivered

Summer winter kit pre-assemblato <i>Pre-assembled summer winter kit</i>	1 set
Manuale di installazione <i>Installation manual</i>	1 set

Montaggio – Installation

Fissare il Summer winter kit sul fianco sinistro del pannello di controllo della GHP AISIN come mostrato in basso. Se necessario sfilare i morsetti per facilitare l'operazione.

Install the Summer winter kit on the left side of the AISIN GHP control panel, as shown below. If necessary, remove the terminal blocks from the bar to complete the operation.

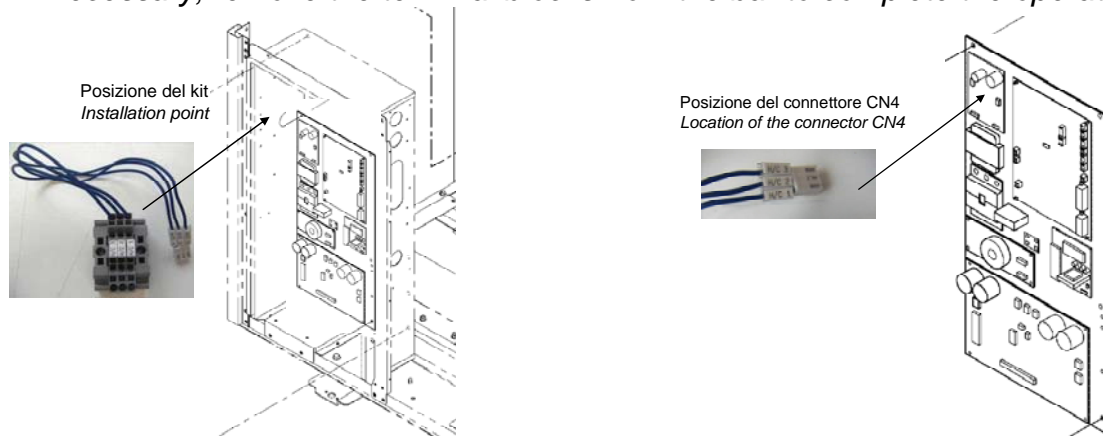

Collegare il lo spinotto bianco al connettore CN4 della scheda di comunicazione della GHP AISIN come mostrato in alto.

Connect the white plug to the terminal CN4 on the AISIN GHP communication board as shown above.

Modificare il settaggio dell' EEP DIPSW2 Pin 1 su ON (riferimenti possono essere trovati sul manuale di installazione della GHP AISIN).

Change the EEP DIPSW2 Pin1 setting to ON (reference can be found on the AISIN GHP installation manual).

Funzionamento – Operation

H/C1 – H/C3 aperto H/C1 – H/C3 open	→	Cooling	H/C1 – H/C3 chiuso H/C1 – H/C3 closed	→	Heating
H/C1 – H/C2 chiuso H/C1 – H/C2 closed	→	Fan			